

# iMediaChassis Series

iMediaChassis 3, 6 and 20 slot

USER MANUAL



**B+B** SMARTWORX

Powered by

**ADVANTECH**

**Advantech B+B SmartWorx - Americas**

707 Dayton Road  
Ottawa, IL 61350 USA  
**Phone** (815) 433-5100  
**Fax** (815) 433-5105

**Advantech B+B SmartWorx - European Headquarters**

Westlink Commercial Park  
Oranmore, Co. Galway, Ireland  
**Phone** +353 91-792444  
**Fax** +353 91-792445

**[www.advantech-bb.com](http://www.advantech-bb.com)**

**B+B SMARTWORX TECHNICAL SUPPORT**

- USA/Canada:** **1 (800) 346-3119** (Ottawa IL USA location)  
Monday - Friday, 7:00 a.m. to 7:00 p.m. CST
- Europe:** **+353 91 792444** (Ireland location)  
Monday - Friday, 8 a.m. to 5:00 p.m. GMT
- Email:** **support@advantech-bb.com**
- Web:** **[www.advantech-bb.com](http://www.advantech-bb.com)**

**CONTENTS**

B+B SMARTWORX TECHNICAL SUPPORT.....	i
List of Figures.....	iv
FCC RADIO FREQUENCY INTERFERENCE STATEMENT.....	v
Class A.....	vi
Class B.....	vi
WARRANTY.....	viii
ABOUT THE IMEDIACHASSIS/20.....	1
HARDWARE FEATURES.....	1
Alarm Reset, Last Gasp and Temperature Gauge.....	1
Alarm Reset Button.....	2
Last Gasp Alarm.....	2
Temperature Gauge.....	3
SNMP Write Lock.....	3
SNMP Management Module LEDs.....	4
Installing the iMediaChassis/20.....	4
DC Power Supply Module Wiring Instructions.....	5
Installing SNMP Management and Application (iMcV-) Modules.....	6
Replacing Power Supply Modules.....	7
User Replaceable Power Supplies.....	7
Dual AC, Part Number 850-10960-2AC.....	7
Dual DC, Part Number 850-10960-2DC.....	8
Dual AC, Part Number 605-10144-2AC.....	9
Dual DC, Part Number 605-10145-2DC.....	9
iMediaChassis/20 Specifications.....	10
About the iMediaChassis/6.....	11
Hardware Features.....	12
Alarm Reset, Last Gasp, and Temperature Gauge.....	12
Alarm Reset Button.....	12
Last Gasp Alarm.....	12

Temperature Gauge.....	12
SNMP Write Lock.....	13
Installing the iMediaChassis/6.....	13
DC Power Wiring, Replacing Power Supply Modules and Fans.....	15
<i>DC Power Supply Wiring Instructions</i> .....	15
<i>User-Replaceable Power Supply Modules</i> .....	15
<i>Fans</i> .....	16
Installing Management and Application (iMcV-)Modules .....	16
Installing Applications Modules.....	16
iMediaChassis/6 Specifications.....	17
About the iMediaChassis/3.....	18
Hardware Features.....	18
Alarm Reset, Last Gasp, and Temperature Gauge .....	18
Alarm Reset Button.....	18
Last Gasp Alarm .....	19
Temperature Gauge.....	19
Installing the iMediaChassis/3.....	19
DC Power Wiring, Replacing Power Supply Modules and Fans.....	20
<i>DC Power Supply Module Wiring Instructions</i> .....	20
Power Supply Modules .....	21
Fans .....	21
Installing Management and Application Modules.....	21
Installing Applications Modules.....	22
SNMP Write Lock.....	22
iMediaChassis/3 Specifications.....	23
Hardware Feature Matrix.....	24
ELECTROSTATIC DISCHARGE PRECAUTIONS.....	25
CERTIFICATIONS.....	26

**LIST OF FIGURES**

Figure 1: iMediaChassis/20, all models.....	2
Figure 2: SNMP Write Lock Switch.....	3
Figure 3: DC Wiring Scheme.....	5
Figure 4: 850-10960-2AC PS.....	7
Figure 5: 850-10960-2DC PS .....	8
Figure 6: 605-10144-2AC PS.....	9
Figure 7: 605-10144-2DC PS .....	9
Figure 8: iMediaChassis/6 PS .....	11
Figure 9: DC Wiring Scheme for iMediaChassis/6.....	15
Figure 10: SNMP Module location for iMediaChassis/6 .....	16
Figure 11: DC Wiring Scheme iMediaChassis/3 .....	21
Figure 12: SNMP Module Slot on iMediaChassis/3.....	22

**FCC RADIO FREQUENCY INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class x computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

## Class A

This equipment has been tested and found to comply with the limits for a Class A computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his/her own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

## Class B

This equipment has been tested and found to comply with the limits for a Class B computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his/her own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

<b>Product Description</b>	<b>Version</b>	<b>FCC Class A</b>	<b>FCC Class B</b>
<b>iMediaChassis/20</b>	Dual AC		✓
	Dual DC		✓
<b>iMediaChassis/6</b>	AC	✓	
	Dual AC	✓	
	DC		✓
	Dual DC		✓
<b>iMediaChassis/3</b>	AC		✓
	2AC		✓
	DC		✓
	2DC		✓
	ACDC		✓



## WARRANTY

Effective for products of B+B SmartWorx shipped on or after May 1, 2013, B+B SmartWorx warrants that each such product shall be free from defects in material and workmanship for its lifetime. This limited lifetime warranty is applicable solely to the original user and is not transferable.

This warranty is expressly conditioned upon proper storage, installation, connection, operation and maintenance of products in accordance with their written specifications.

Pursuant to the warranty, within the warranty period, B+B SmartWorx, at its option will:

1. Replace the product with a functional equivalent;
2. Repair the product; or
3. Provide a partial refund of purchase price based on a depreciated value.

Products of other manufacturers sold by B+B SmartWorx are not subject to any warranty or indemnity offered by B+B SmartWorx, but may be subject to the warranties of the other manufacturers.

Notwithstanding the foregoing, under no circumstances shall B+B SmartWorx have any warranty obligations or any other liability for: (i) any defects resulting from wear and tear, accident, improper use by the buyer or use by any third party except in accordance with the written instructions or advice of the B+B SmartWorx or the manufacturer of the products, including without limitation surge and overvoltage conditions that exceed specified ratings, (ii) any products which have been adjusted, modified or repaired by any party other than B+B SmartWorx or (iii) any descriptions, illustrations, figures as to performance, drawings and particulars of weights and dimensions contained in the B+B SmartWorx' catalogs, price lists, marketing materials or elsewhere since they are merely intended to represent a general idea of the products and do not form part of this price quote and do not constitute a warranty of any kind, whether express or implied, as to any of the B+B SmartWorx' products.

THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEMS IN ACCORDANCE WITH THE EXPRESS WARRANTY SET FORTH ABOVE IS B+B SMARTWORX' SOLE OBLIGATION UNDER THIS WARRANTY. THE WARRANTY CONTAINED IN THIS SECTION SHALL EXTEND TO THE ORIGINAL USER ONLY, IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL SUCH WARRANTIES AND INDEMNITIES ARE EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION (I) THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY AND (II) ANY WARRANTY THAT THE PRODUCTS ARE DO NOT INFRINGE OR VIOLATE THE INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY. IN NO EVENT SHALL B+B SMARTWORX BE LIABLE FOR LOSS OF BUSINESS, LOSS OF USE OR OF DATA INTERRUPTION OF BUSINESS, LOST PROFITS OR GOODWILL OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES. B+B ELECTRONIC SHALL DISREGARD AND NOT BE BOUND BY ANY REPRESENTATIONS, WARRANTIES OR INDEMNITIES MADE BY ANY OTHER PERSON, INCLUDING WITHOUT LIMITATION EMPLOYEES, DISTRIBUTORS, RESELLERS OR DEALERS OF B+B SMARTWORX WHICH ARE INCONSISTENT WITH THE WARRANTY, SET FORTH ABOVE.

## ABOUT THE IMEDIACHASSIS/20

The iMediaChassis series is a modular chassis platform designed for use with B&B Electronics' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/20 is a 3U high, rack mountable chassis that features 20 slots for installing application series modules plus an additional slot for installing an SNMP Management Module. Power supply modules are user-replaceable and hot-swappable.

The iMediaChassis/20 line offers models available in dual AC, dual DC and ACDC versions. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.



## HARDWARE FEATURES

### ALARM RESET, LAST GASP AND TEMPERATURE GAUGE

The iMediaChassis/20 series supports power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair.

User-Replaceable  
Power Supply Modules



Figure 1: iMediaChassis/20, all models

---

## ALARM RESET BUTTON

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power module. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply module itself also indicate power supply module failures.)

---

## LAST GASP ALARM

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:

- Both power supply modules malfunction.
- Both power supply modules are powered down.
- When the AC line fails.

## TEMPERATURE GAUGE

The iMediaChassis/20 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView<sup>2</sup>) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

## SNMP WRITE LOCK

There is an SNMP Write Lock switch located below slot #3 on the front of the iMediaChassis/20. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



Figure 2: SNMP Write Lock Switch

### NOTE

 
Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about configuration and operation. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power supply modules and other functions.

## SNMP MANAGEMENT MODULE LEDS

The SNMP Management Module features several LEDs. The LED functions are:

LNK/ACT	Glows green when a link is established on port. Blinks green when data activity occurs.
FDX/COL	Glows yellow when port is in Full-duplex mode. Blinks yellow when port is operating in Half-duplex mode and collisions occur.
TEMP	Glows yellow when temperature of unit surpasses a user-defined level.
PS	Glows yellow when one module malfunctions.
FAN A / FAN B	Glows yellow when a fan malfunctions.



### Installing the iMediaChassis/20

Install the chassis first before installing any modules into an iMediaChassis. When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
2. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

To install 20 -slot Rackmount chassis:


1. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
2. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
3. Plug the chassis into a reliable, filtered power source.
4. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may

be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature ( $T_{ma}$ ) specified by the B+B SmartWorx.

5. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
6. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
7. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
8. Reliable Grounding - Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).
9. All AC and DC versions are intended for use in a Restricted Access Location (RAL).

## DC POWER SUPPLY MODULE WIRING INSTRUCTIONS

The following diagram shows the wiring configuration for a -48 VDC power supply module for the iMediaChassis/20-2DC and iMediaChassis/20-ACDC.

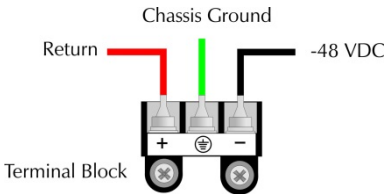

**Figure 3: DC Wiring Scheme**

### NOTE

*The chassis is protected against incorrect wiring configurations. When wired incorrectly, the chassis will not function, but no damage will occur.*

## Installing SNMP Management and Application (iMcV-) Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B+B SmartWorx recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

Install the iMediaChassis/20 SNMP Management Module into the first slot of the chassis.

NOTE
<i>This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules in this slot.</i>

## REPLACING POWER SUPPLY MODULES

## USER REPLACEABLE POWER SUPPLIES

The iMediaChassis power supply modules are redundant \*, failed power supply modules should promptly be replaced to maintain network integrity and prevent data loss.

To replace a power supply module:

1. Disconnect the power source from the power supply module.
2. Remove the screws of the retainer plate (on some AC modules).
3. Move the Power Supply Release switch toward the right or unscrew captive release screw.
4. Before grasping the power supply module by the silver handle, press the release screw and then slide out of the chassis (Power supply modules are hot-swappable).
5. Install new power supply module. If module is equipped with an ON/OFF switch install the module with the switch in the OFF position.

## DUAL AC, PART NUMBER 850-10960-2AC

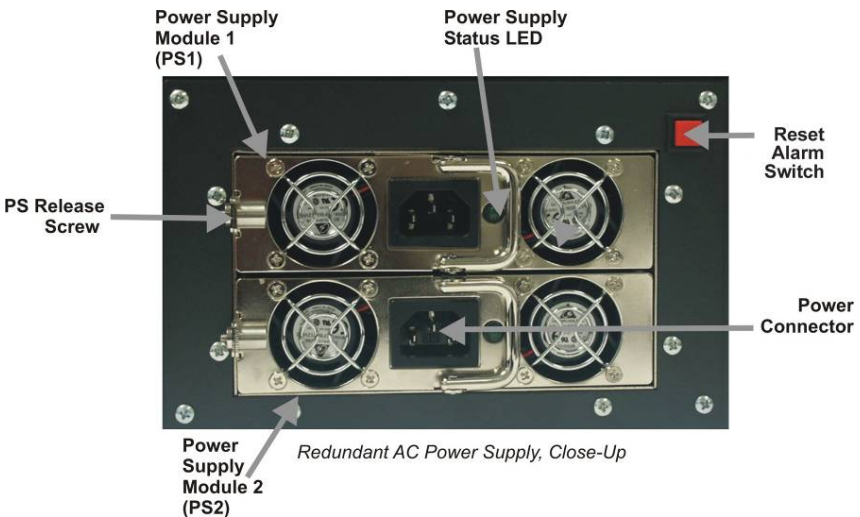


Figure 4: 850-10960-2AC PS



## DUAL DC, PART NUMBER 850-10960-2DC

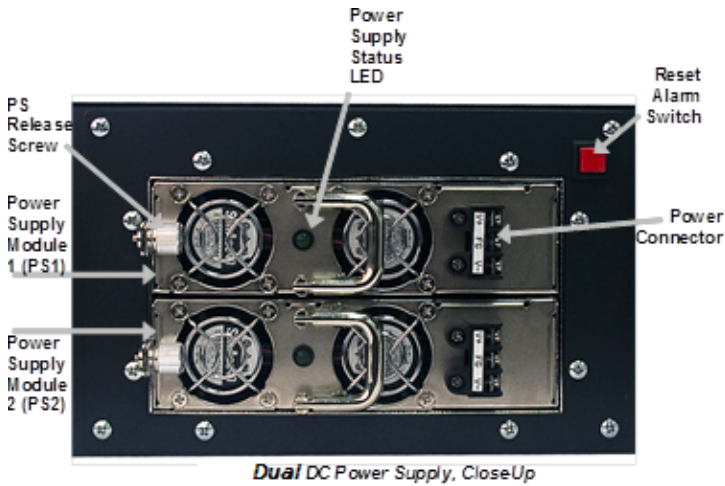


Figure 5: 850-10960-2DC PS

Both the 850-10960-2AC and 850-10960-2DC were put on End-of-Life "EOL" in June 2015; support is still available for existing chassis deployed. Power supplies are limited to a six year warranty.

DUAL AC, PART NUMBER 605-10144-2AC



Figure 6: 605-10144-2AC PS

DUAL DC, PART NUMBER 605-10145-2DC



Figure 7: 605-10144-2DC PS

**iMediaChassis/20 Specifications****Input Specifications**

<b>Dual AC</b>	100 to 240V AC, 50/60Hz, 3.5/1.5A
<b>Dual DC</b>	-48V DC, 5A
<b>ACDC</b>	100 to 240V AC, 50/60HZ, 2A -48V DC, 4.4A

**Operating Temperature**

0° C to 50° C (32° F to 122° F)

**Storage Temperature**

<b>Dual AC &amp; ACDC</b>	-20° C to 80° C (-4° F to 176° F)
<b>Dual DC</b>	-20° C to 60° C (-4° F to 140° F)

**Humidity**

20 to 90% (non-condensing at 40° C)

**Shipping Weight**


11.3 kg (25 lbs)

**Dimensions**

13.21 x 48.26 x 35.0 5cm (5.2 x 19.0 x 13.8 inches)

## ABOUT THE IMEDIACHASSIS/6

The iMediaChassis series is a modular chassis platform designed for use with B+B SmartWorx Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/6 is 1U high, can be installed on a rack mount shelf, and supports optional redundant power supply modules, as well as an SNMP Management Module.

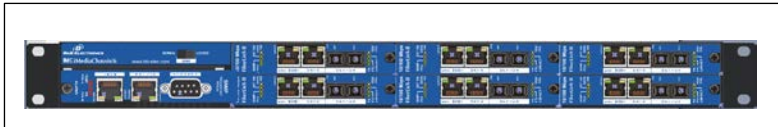

The iMediaChassis/6 series offers a line of models including single AC, single DC, dual AC and dual DC. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.



**Figure 8:iMediaChassis/6 PS**

## HARDWARE FEATURES

### ALARM RESET, LAST GASP, AND TEMPERATURE GAUGE

The iMediaChassis series supports modular power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair. Keeping fans functional ensures that the modules will operate within their temperature specifications.

### ALARM RESET BUTTON

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply module. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply itself also indicate power supply failures.) After stopping the alarm, remove the power supply and replace the power supply module.

### LAST GASP ALARM

The iMediaChassis series includes the Last Gasp trap feature, “Remote Chassis Down”, which sends a Trap when the following occurs:

 
- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

### TEMPERATURE GAUGE

The iMediaChassis/6 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView<sup>2</sup>) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

## SNMP WRITE LOCK

There is an SNMP Write Lock switch located above the SNMP module slot on the front of the iMediaChassis/6. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



### NOTE

*Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.*

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about configuration and operation. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

Please refer to page 4 for SNMP LEDs.

## Installing the iMediaChassis/6

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
2. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

### To install a 6-slot Rackmount chassis:

1. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
2. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
3. Plug the chassis into a reliable, filtered power source.

4. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T<sub>ma</sub>) specified by the B+B SmartWorx.
5. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
6. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
7. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
8. Reliable Grounding - Reliable grounding of Rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).
9. All AC and DC versions are intended for use in a Restricted Access Location (RAL).

## DC POWER WIRING, REPLACING POWER SUPPLY MODULES AND FANS

### DC POWER SUPPLY WIRING INSTRUCTIONS

The following diagram shows the wiring configurations for -48 VDC power supply modules for the iMediaChassis/6.

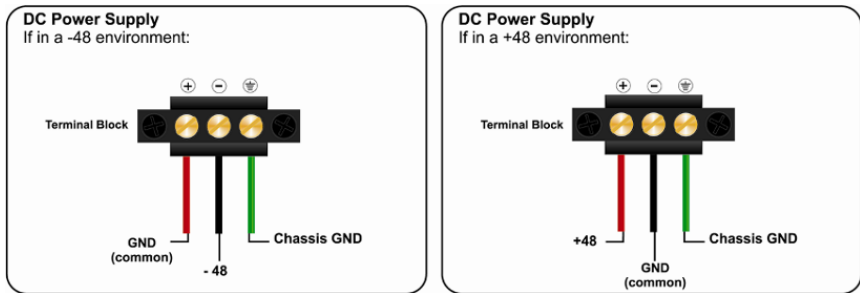


Figure 9: DC Wiring Scheme for iMediaChassis/6

### USER-REPLACEABLE POWER SUPPLY MODULES

The iMediaChassis/6 ships from B+B SmartWorx with one or two power supply modules installed depending on the model. Chassis ordered with one power supply come with a filler tray installed in the second slot.

To install a second power supply:

1. Remove the filler tray.
2. Slide the power supply module into the chassis and click into place.
3. Attach power cord.

**To remove a power supply module:**

1. Disconnect the power source from the power supply.
2. Move the Power Supply Release switch toward the right and hold while grasping the power supply module by the silver handle.
3. Slide out of the chassis. (Power supply modules are hot-swappable.)
4. Install new power supply module.



## FANS

Users can define a threshold for fan operation via SNMP (when installed in a managed environment). If a fan's speed falls below the specified level, SNMP sends a Trap (configured in iView<sup>2</sup>) to the administrator. There are also two LED indicators on the SNMP Management Module for fan failure.

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB9 serial port, and supports SNMP V1/V2c.

## Installing Management and Application (iMcV-) Modules

### INSTALLING APPLICATIONS MODULES

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B+B SmartWorx recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

Install the iMediaChassis/6 slot into the first slot on the far left of the chassis.

#### NOTE

*This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules into this slot.*



Figure 10: SNMP Module location for iMediaChassis/6

## IMEDIACHASSIS/6 SPECIFICATIONS

**Input Specifications**

<b>AC</b>	100 to 240V AC, 50/60Hz, 1A
<b>DC</b>	-48V DC, 2A

**Operating Temperature:**

<b>AC</b>	-25° C to 50° C (-130° F - 122° F)
<b>DC</b>	-40° C to 100° C (-40° F - 212° F)

**Storage Temperature:**

<b>AC</b>	-40° C to 85° C (-40° F - 185° F)
<b>DC</b>	-55° C to 125° C (-67° F - 257° F)

**Humidity**

5 - 95% (non-condensing); 0-10,000 ft. altitude

**Shipping Weight**

13 lbs (5.90 kg)

**Dimensions**

4.45 x 44.07 x 27.05cm (1.75 x 17.35 x 10.65 inches)

## ABOUT THE IMEDIACHASSIS/3

The iMediaChassis series is a modular chassis platform designed for use with B+B SmartWorx' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/3 is a 1U high, can be mounted on a rack shelf, capable of offering redundant power supply modules, and supports an SNMP Management Module.



The iMediaChassis/3 series offers a line of models including single AC, single DC, dual AC, dual DC and ACDC version. All contain internal fixed power supply modules that are not end-user replaceable. It offers features such as redundant power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.

## HARDWARE FEATURES

### ALARM RESET, LAST GASP, AND TEMPERATURE GAUGE

The iMediaChassis/3 ships with one or two AC or DC power supply modules, depending on the model. Fans are included in all models.

### ALARM RESET BUTTON

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs the unit needs to be returned to IMC for repair.

---

## LAST GASP ALARM

The iMediaChassis series includes the Last Gasp trap feature, “Remote Chassis Down”, which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

---

## TEMPERATURE GAUGE

The iMediaChassis/3 includes a temperature monitoring gauge with a heat sensor on the SNMP Management Module. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView<sup>2</sup>) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

### Installing the iMediaChassis/3

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Stay within the chassis' power rating to prevent overload of supply circuits or damage to any overcurrent protection and supply wiring.
2. Maintain reliable ground, especially when connecting to a power strip instead of directly to a branch circuit.
3. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
4. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

Use the iMediaChassis/3 as a table-top chassis, mount on a Rackmount shelf.

To install the 3-slot Rackmount in the chassis:

1. Install the iMediaChassis/3 by placing it on a flat surface.
2. Make sure to leave adequate space on the sides of the unit to accommodate cooling.
3. If mounting on a Rackmount shelf, align holes of the chassis to the shelf and secure with screws.

The Rackmount shelf is sold separately. To purchase the Rackmount shelf, (part number #895-39949, visit the B+B SmartWorx' Product Accessories page.

4. Attach the cables between the chassis and the device that will be interconnected, and then plug the unit into a reliable, filtered power source.
5. If mounting the chassis on a wall, place two #10 pan head screws (not supplied) on the wall according to the distance of the holes on the chassis, and then hang the unit on the screws.
6. All versions are intended for use in a Restricted Access Location (RAL).
7. A readily accessible disconnect device shall be incorporated in the building installation wiring.
8. A suitable listed circuit breaker shall be provided in the building installation as the unit's disconnect device. The branch circuit rating (i.e. minimum 15A listed circuit breaker, etc.).

## DC POWER WIRING, REPLACING POWER SUPPLY MODULES AND FANS

### *DC POWER SUPPLY MODULE WIRING INSTRUCTIONS*

The following image shows the wiring configuration for a 48 VDC power supply in a negative ground system application. For positive ground system applications remove the chassis ground shorting jumper and connect it between the positive terminal and the chassis ground terminal. Alternatively, the chassis grounding jumper can be eliminated and the chassis ground connected at the power source. The ground terminal and the negative terminal are not connected inside the iMediaChassis/3.

## DC Power Supply

Negative ground system configuration (default position)

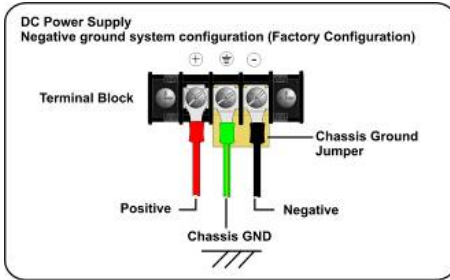


Figure 11: DC Wiring Scheme iMediaChassis/3

### NOTE

*Incorrect wiring will result in chassis malfunction.*

*The iMediaChassis/3 is compliant with Isolated Grounding Plane practices. The POSITIVE and NEGATIVE terminals are isolated from chassis ground and must have a ground reference at the power-sourcing equipment.*

## POWER SUPPLY MODULES

Power supply modules in all models of the iMediaChassis/3 are fixed, and not end-user replaceable.

## FANS

The iMediaChassis/3 includes temperature-triggered fans. When the temperature inside the chassis reaches 45° C, the two fans activate to cool the chassis. Fans are not end-user replaceable.

## Installing Management and Application Modules

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB-9 serial port, and supports SNMP V1/V2c.

## INSTALLING APPLICATIONS MODULES

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B+B SmartWorx recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

Install the iMediaChassis/3 slot SNMP Management Module into the bottom left slot.

### NOTE

*This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules in this slot.*



Figure 12: SNMP Module Slot on iMediaChassis/3

## SNMP WRITE LOCK

The SNMP Write Lock switch is located on the back of the iMediaChassis/3. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



## NOTE

Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about how to configure and operate. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

Please refer to page 4 for SNMP LEDs.

## IMEDIACHASSIS/3 SPECIFICATIONS

## Input Specifications

<b>AC</b>	100 to 240V AC, 50/60Hz, 0.75A
<b>DC</b>	35V DC to 75V DC Max, 1.6A

## Operating Temperature

<b>AC</b>	0° C to 50° C (32° F to 122° F)
<b>DC</b>	-40° C to 50° C (-67° F to 122° F)

## Storage Temperature

<b>AC</b>	-40° C to 85° C (-40° F to 185° F)
<b>DC</b>	-55° C to 125° C (-40° F to 212° F)



**Humidity:** 5 to 95% (non-condensing); 0 to 10,000 ft. altitude


**Shipping Weight:** 5 lbs (2.3 kg)

**Dimensions:** 4.4 x 19.0 x 22.0 cm (1.73H 7.50W 8.74D inches)

## Hardware Feature Matrix

Power Supply	iMediaChassis/3
Versions	AC, 2AC, DC, 2DC*, ACDC
Type	Fixed
End user replaceable	No
LEDs	Yes
Redundant upgrade on single slot chassis	No

\*Trap can be set for exceeding a temperature value

WARNING	
	<p>Disconnect all power supplies before servicing.</p>

## ELECTROSTATIC DISCHARGE PRECAUTIONS

Electrostatic discharge (ESD) can cause damage to any product, add-in modules or stand-alone units, containing electronic components. Always observe the following precautions when installing or handling these kinds of products:

Do not remove unit from its protective packaging until ready to install.

Wear an ESD wrist grounding strap before handling any module or component. If the wrist strap is not available, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.

Hold the units by the edges; do not touch the electronic components or gold connectors.

After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the modules or stand-alone units over any surface.



**WARNING!** Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

UL/CUL: Listed to Safety of Information Technology Equipment, including Electrical Business Equipment.

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility (2004/108/EC) and the Council Directive on Electrical Equipment Designed for use within Certain Voltage Limits (2006/95/EC). Certified to Safety of Information Technology Equipment, Including Electrical Business Equipment. For further details, contact B+B Electronics.



**CERTIFICATIONS**

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility (2004/108/EC). For further details, contact B+B SmartWorx.



**Class 1 Laser product, Luokan 1 Laserlaite,  
Laser Klasse 1, Appareil A' Laser de Classe 1**

European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.



as

**ISO 9001:2008  
REGISTERED**

© 2017 B+B SmartWorx. All rights reserved. The information in this document is subject to change without notice. B+B SmartWorx assumes no responsibility for any errors that may appear in this document. iMediaChassis is a trademark of B+B SmartWorx. Other brands or product names may be trademarks and are the property of their respective companies.