



## Home

## Embedded Software

## Development Tools

J-Link ARM

J-Link ARM Pro

J-Link ARM Lite

J-Link Coldfire

 J-Trace ARM

J-Trace for Cortex-M3

## Production Tools

## Evaluate our software!

## Downloads

## Distributors

## Customers

## Partners

## Sales

## Forum

## About us

## Head office Germany

Phone: +49-2103-2878-0

Fax: +49-2103-2878-28

E-mail: [info@segger.com](mailto:info@segger.com)[www.segger.com](http://www.segger.com)

## US office

Phone: +1-978-874-0299

Fax: +1-978-874-0599

E-mail: [info@segger-us.com](mailto:info@segger-us.com)[www.segger-us.com](http://www.segger-us.com)
[Development Tools](#) [J-Trace ARM](#) [Overview](#)

## J-Trace ARM

### Features

- USB-driven JTAG and Trace (38-pin Micror) interface
- Supports all ARM 7 and ARM9 devices
- No power supply required, powered through USB, although external power supply plug is available
- JTAG speed 12 MHz
- Auto speed recognition
- USB-2 full speed (12Mbit/sec)
- Adaptive clock based on RTCK JTAG signal
- All signals can be monitored, target voltage can be measured
- 20-pin standard JTAG connector, 38-pin standard Trace Micror connector
- USB, 20-pin flat cable and 38-pin trace cable included
- Full integration with the C-SPY Debugger, advanced debugging features available from C-SPY
- Integration into IAR Embedded Workbench for ARM makes setup and use easy
- Supported platform s: Windows 2000 and Windows XP


[Documentation download](#)
 [Subscribe to J-Link software notification](#)

### Trace features

- Trace supports up to 200 MHz full and 100 MHz half clock rate
- Trace based on ARM ETM (Embedded Trace Macrocell)
- Trace support for devices with built-in trace ports
- 2 Mbyte trace memory buffer
- Compact housing, fits easily on the desk
- Silent, fanless design
- Support for cycle accurate and compressed tracing
- Supports 4 / 8 / 16 bit trace port at both full and half-rate clocking
- Trace window synchronizes to source and disassembly window
- Function trace shows called functions hierarchically